



Instructions for rental coffeemaker

<warning: do not touch hot surfaces>

1. USE ONLY 110-120 VOLT GROUNDED OUTLET! NEVER USE AN EXTENSION CORD!
2. Never plug coffeemaker in without water or liquid coffee in it. This will ruin the machine!
3. Do not touch hot surfaces. Use handles or knobs
4. Never immerse cords or plugs of coffee maker in water or other liquid.
5. Unplug from the outlet when not in use. Allow to cool before putting on or taking off parts.
6. Do not let cord hang over edge of table or counter top, or touch hot surfaces.
7. Make sure cover, coffee basket, percolating tube and cord are properly attached before coffeemaker is plugged in.

BREWING

- 1 - With basket and stem removed and coffeemaker UNPLUGGED, fill coffee maker with cold water to desired cup level.
- 2 - Place the stem into the heating unit well in the bottom of the coffeemaker.
- 3 - Place the basket on the stem, a paper filter is not required.
- 4 - Add ground coffee to the basket using the following chart.

30 - 35 cups of coffee	Use 2 cups of dry coffee
50 - 55 cups of coffee	Use 4 cups of dry coffee

- 5 - Place the cover on the maker and turn to lock into the handle slots.
- 6 - Plug the cord in a 120-volt, AC grounded electric outlet ONLY. Set the ON/OFF switch to ON.
- 7 - The maker will stop perking automatically. As coffee is brewing, the yellow "Brew" light will be illuminated. Coffee is ready when the green "Ready" light is illuminated. It takes approximately 1 minute per cup for the maker to brew.

Cleaning instructions

Unplug from power then empty and rinse coffee maker before returning to ABC Rental. Never immerse coffee maker in water.