

COTTON CANDY MACHINE INSTRUCTIONS

www.ABCrental.com

SETUP FOR USE:

- 1. Set unit on a level surface. DO NOT lift unit by spinner head.
- 2. Lock-N-Go handles on the side are used for transport. Rotate both handles to UNLOCKED position.
- 3. Place floss pan on unit and dome (if you have rented that accessory).

BEFORE YOU PLUG IN MACHINE:

- 1. Make sure machine switches are OFF before plugging equipment into receptacle.
- 2. Make sure wall outlet can accept the grounded plugs.
- 3. DO NOT USE EXTENSION CORDS!
- 4. If cord is damage, please contact us immediately!

CONTROLS AND THEIR FUNCTIONS:

- Motor & Master Switch: Two position, lighted rocker switch—turns Motor ON/OFF and supplies power
 to the heat switch. The green light ON indicates there is power to the unit.
- **Heat Switch**: Two position, lighted rocker switch turns the heating element ON/OFF. The green light ON indicates there is power to the element.
- Heat Control Knob: The heat control know adjust the power to the heating element.

MAKING FLOSS:

- 1. All switches to the OFF position
- 2. With the spinner head stopped, pour flosssugar in the spinner head. Always fill it 90% full with sugar. DO NOT OVERFILL! NEVER ADD SUGAR WHILE MOTOR IS RUNNING! **DANGER**!!
- 3. Turn the Motor & Master Switch ON. Wait 10 seconds, and then turn Heat Switch ON.
- 4. Turn the heat control knob clockwise to maximum the possible warm-up.
- 5. The machine should start making floss in 20-30 seconds. When unit starts making floss, reduce the heat setting. If it's too hot, it will start smoking and carbonize the element.
- 6. Once the ideal heat control setting is found, operate with the setting near this position each time.
- 7. Take a cone and with a light flicking action, roll cone in the web of floss building up in the pan.

ALWAYS TURN MACHINE OFF BEFORE ADDING MORE SUGAR! KEEP HANDS AWAY FROM SPINNING HEAD!

CLEANING:

- 1. Use all the sugar in the spinner head then cut off unit and let cool.
- 2. <u>RINSE</u> the floss pan and dome **ONLY** and <u>do not clean</u> the spinner head.

