

LED WIRELESS LIGHT INSTRUCTIONS

www.ABCrental.com

SETUP FOR USE:

- 1. Carefully unbox the light using the light's handle.
- 2. If charged, the cord will not be needed. Plug cord in at the bottom if it is needed.
- 3. Place light where you wish to have the décor light, "kick stand" should be facing you.
- 4. Keep away from water AND from places where people may hit it accidentally.

TURNING THE UNIT ON

- On the bottom of the unit, turn the power switch ON and the LED lights will come on.
- The LED screen on the side will also illuminate and the four power percentage lights.
- Place the unit back where you want the décor light.
- Adjust the kickstand to have the light fall more on the wall/curtain as you wish

REMOTE CONTROL

- 1. Make sure you aim the remote control close to the unit...about 24" or less.
- 2. **Push the number keys (0-9)** to change the colors.
- 3. Do not use the MANUAL set-up, it may shut down the unit.
- 4. Once you are satisfied with the color and look, and if the event is within 2 hours, you may use the BLACK OUT key to shut off the units lights. Prior to the event, simply press the BLACK OUT button again to turn on the lights. Don't leave unit on if you don't need it, it will reduce the battery/lights for your event!



