

POPCORN INSTRUCTIONS

We have several popcorn poppers in our inventory so these instructions may differ to the unit you have, If you have questions, please give us a call.

DO NOT USE WITH AN EXTENSION CORD! DO NOT TRANSPORT UNIT ON ITS SIDE!

Before You Plug In machine

- 1. Install unit in a level position.
- 2. Make sure all machine switches are OFF before plugging equipment into receptacle
- 3. Install the kettle on the hooks inside and twist in the power cord at the top.
- 4. Make sure wall outlet can accept the grounded plus (DO NOT USE AN EXTENSION CORD) and plug in.

Popping Corn Instructions

- 1. Turn all switches ON.
- 2. To determine when kettle is ready to pop corn (about 4 minutes), test pop three kernels of corn in some of the oil. When kernels pop, kettle is ready.
- 3. Lift kettle lid, pour in popcorn, flavoring and oil and CLOSE LID.
- 4. When corn has finished popping, gently dump the popcorn. Repeat as necessary
- 5. When finished popping, turn KETTLE HEAT and KETTLE MOTOR switches OFF. NEVER LEAVE THE HEAT ON WHEN YOU ARE NOT POPPING CORN!

Cleaning The Unit

- 1. With the machine OFF and UNPLUGGED, allow to cool completely.
- 2. Empty all popcorn popped and not popped from bottom and removable tray (\$40 is missing).
- 3. Twist the power cord inside and remove the cooled down kettle.
- 3. Take a clean, SLIGHTLY damp cloth and wipe excess grease from metal unit DON'T USE ANY CHEMICALS.
- 4. Take another, SLIGHTLY damp cloth and wipe down the glass panels, you may use glass cleaner.



To avoid burns, DO NOT touch the kettle or any heated surface. DO NOT place or leave objects in contact with heated surfaces.

013_092414



DANGER

Machine must be properly grounded to prevent electrical shock to personnel. Failure to do so could result in serious injury, or death.

DO NOT immerse any part of this equipment in water.

DO NOT use excessive water when cleaning.

Keep cord and plug off the ground and away from moisture.

Always unplug the equipment before cleaning or servicing.

Make sure all machine switches are in the OFF position before plugging the equipment into the receptacle.

06/22